
Maintenance/Troubleshooting



Notes and sources of error


For optimal use of the appliance please observe the following instructions. If there should be any sources of error the instructions will give a step-by-step advice for troubleshooting.

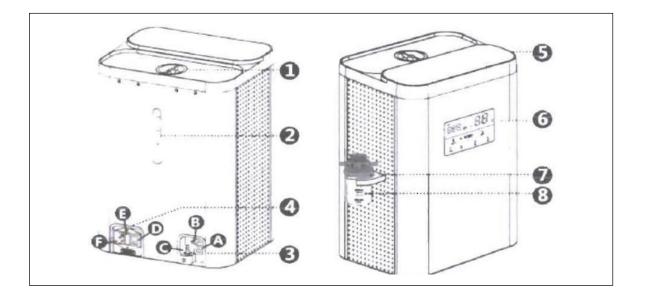

- 1. water tank
- 2. fill level indicator
- 3. A) water drain B) H₂ exit C) drain valve
- 4. D) main switch E) fuse F) power connection
- 5. operation panel
- 6. function display
- 7. retaining clip
- 8. filter container/ H2 cannula connection


LOW WATER

If the LOW WATER indicator flashes the water level has dropped below the Minimum. The appliance switches off and an acoustic signal sounds.

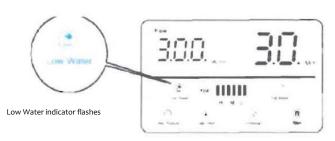



TO DO: Please fill up the distilled water! After that the appliance is ready for use again.

FULL WATER

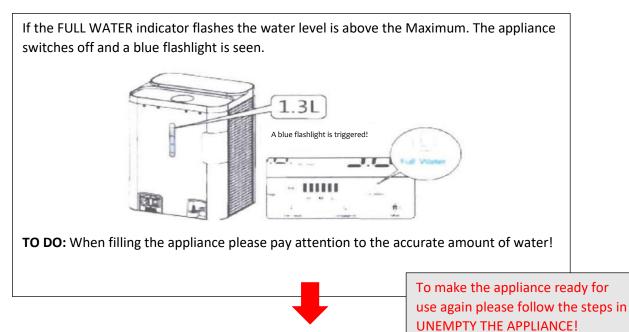

UNEMPTY THE APPLIANCE

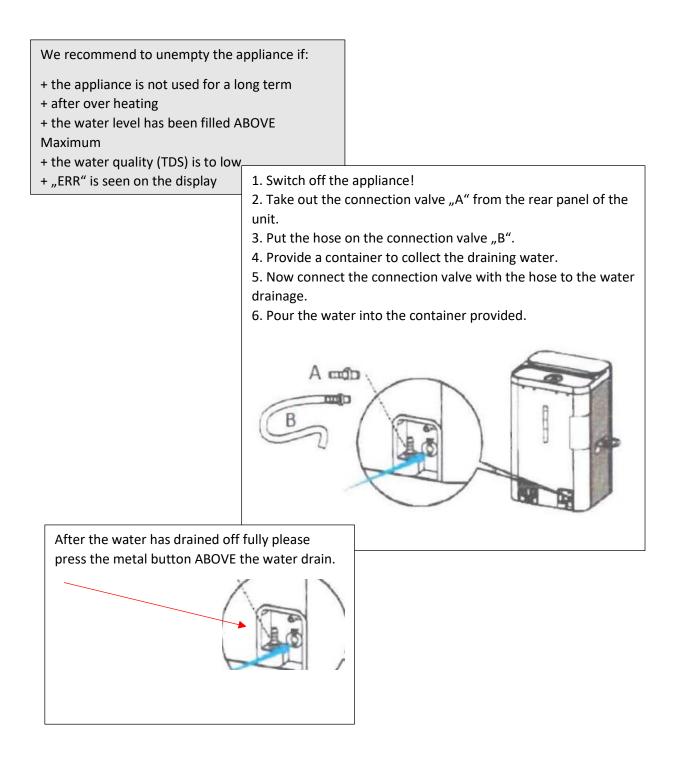

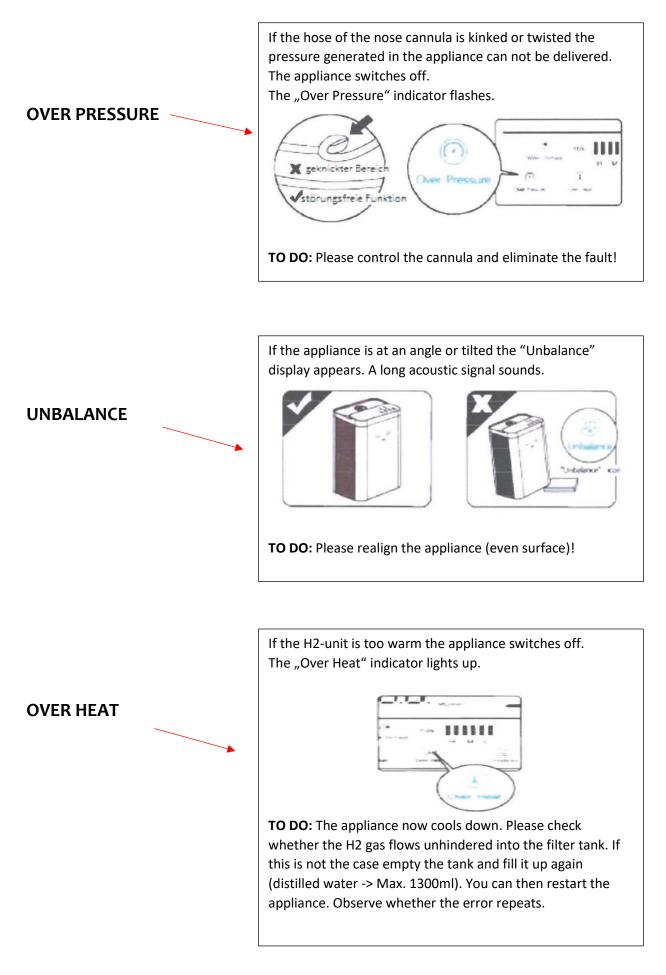

TDS Water quality

The appliance has a TDS control function. The display shows the states (L)=LOW; (M)=MEDIUM and (H)=HIGH. The display can take the colour GREEN, YELLOW or RED. The display shows the current water quality.

The appliance switches off when the water quality is LOW.



TO DO: Empty the tank (see-> unempty the appliance)! Fill up the tank again (distilled water -> Max. 1300ml). The display should now show, HIGH". You can use the appliance as usual.

ATTENTION: If the "HIGH" indicator does not appear observe the distilled water!

ONLY fill the appliance with distilled water!
Use the appliance for only 30 minutes a day in the beginning. Increase the duration of use slowly.
Change the nose cannula every 8 weeks. For frequent use please change after 4 weeks.
If the appliance is not used for a longer period of time please drain the water.


Note

Security1.) Only use the appliance in a well-ventilated environment. 2.) Ensure a safe and stabile power supply. 3.) Children are only allowed to use the appliance under adult supervision. 4.) If you feel unwell or sick stop using the appliance immediately. Consult a doctor if necessary.
--

Filter


After 6 - 12 months of operation the "filter" indicator appears to remind you to change the resin mixture.

Proceed as follows:

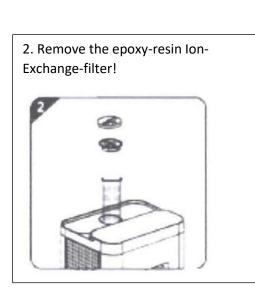



3. Remove the filter and empty the appliance! Refill the appliance with a new resin mixture.

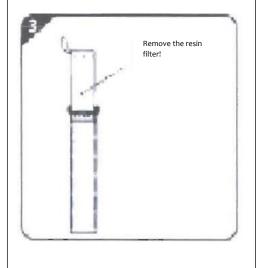



5. Keep the "MODE" switch pressed until an acoustic signal sounds twice. The appliance is now ready for use again!



NeuroBodyTech GmbH, Waldstrasse 22, 83132 Pittenhart, managing director: Martin Rusam, Local court München - HRB 241499 Tax Number: 163/133/30102 (Finanzamt Traunstein), VAT-Nr.: DE320815970 EORI-Nr.: DE385010756645310 (Hauptzollamt Rosenheim)

Showroom & Data analysis: Seestrasse 39 (1. Stock), 83209 Prien am Chiemsee Technology & Software development: Bernauer Strasse 21 (1. Stock), 83209 Prien am Chiemsee Head office: Waldstrasse 22, 83132 Pittenhart im Chiemgau